Instruction Manual

▲ Display Functions

in/mm/F: Switch display between inch, metric and inch fraction
ABS: Press ABS(INC) button to get relative zero; Press ABS button again to disable the function
Hold: Press Hold button to Hold the data; Press Hold button again to disable the function
On/Off: Press On/Off button to turn on or off the display
Zero: Press Zero button to set Zero at any position
Calibrate: If the planer cannot reach Zero, the Digi. Scale need to be calibrated to set Zero.
Place the planer at 1 inch height(by using a vernier scale or 1″gage block), then press ABS button, ″INC″will appear on the LCD Display, which it set the display reading to a relative Zero.

▲ Specification

Measuring range: 6”
Resolution: 0. 001″ 0. 01mm 1/64″
Accuracy: 0. 001″per 6”
Battery: 3V CR2032; Battery life approx 1 year

▲ Trouble Shooting Guide

Flash digits or no display: Replace the battery. (Please recycle the old battery)
Frozen display: Remove battery and wait for 1 mintue, then re-set the battery.

Assembly

▲ Digi.Scale easy install on all kind of planer: Dewal, Delta, Sears. . .
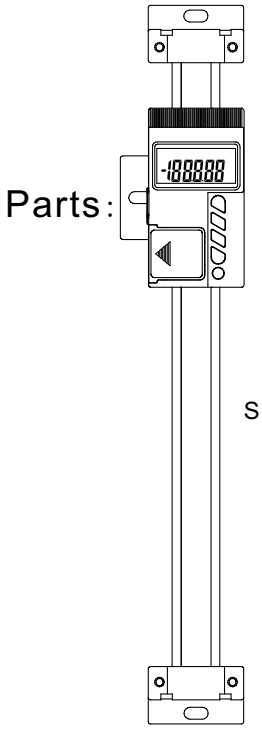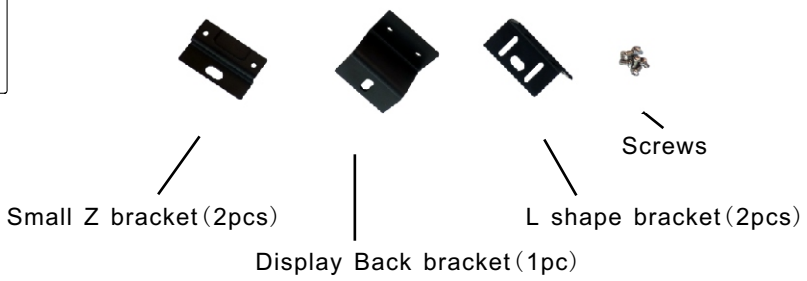
Parts: